

## **MAC-816 Installation Manual**

(1) Change Installation Code: \* 6 1 0 1 0 0 I I I I #

(I I I I = Installion Code, Factory Default = 1 0 1 0)

(2) Zone Setting: \* 6 I I I I 1 Z Z F #

(ZZ = 01-16 Zone, F = Function Code 1-7, Factory Default F = 2)

(3) Exit Delay Time<T1>: \* 6 I I I I 2 M M S #

(M M = 00-99 mins, S = (0-9) x 10 seconds)

(4) Entry Delay Time<T2>: \* 6 I I I I 3 M M S #

(M M = 00-99 mins, S = (0-9) x 10 seconds)

(5) Alarm Output Time<T3>: \* 6 I I I I 4 M M S #

(M M = 00-99 mins, S = (0-9) x 10 seconds)

\*\*\*System Reset: Disconnect all powers (include AC and DC backup battery), put out the reset jumper on the cirult board, then re-connect the power and put back the reset jumper to set the factory default.\*\*\*

## **MAC-816 User Manual**

(1) Change Master Code: \* 5 1 2 3 4 0 M M M M #

(M M M M = Master Code, Factory Default = 1 2 3 4)

(2) Change User Code: \* 5 M M M M 1 U U U U #

\* 5 M M M M 2 U U U U #

\* 5 M M M M 3 U U U U #

\* 5 M M M M 4 U U U U #

(M M M M = Master Code, Factory Default = 1 2 3 4)

(3) Quick Armed( Activate/Deactive): \* 5 M M M M 9 #

(M M M M = Master Code, Factory Default = 1 2 3 4)

(4) Zone Bypass: \* 8 M M M M Z Z #

(M M M M = Master Code, Z Z= 01-16 Zone)

(5) Quick Armed: \* 0 (Disarmed-Press the User Code)

Function Code: 1). 24 Hr.Instant 2). Instant 3). Exit only  
4). Delay In/Out 5). Armed/Disarmed Key  
6). 24 Hr.Silent 7). External Key